


Hotpoint

Hotpoint





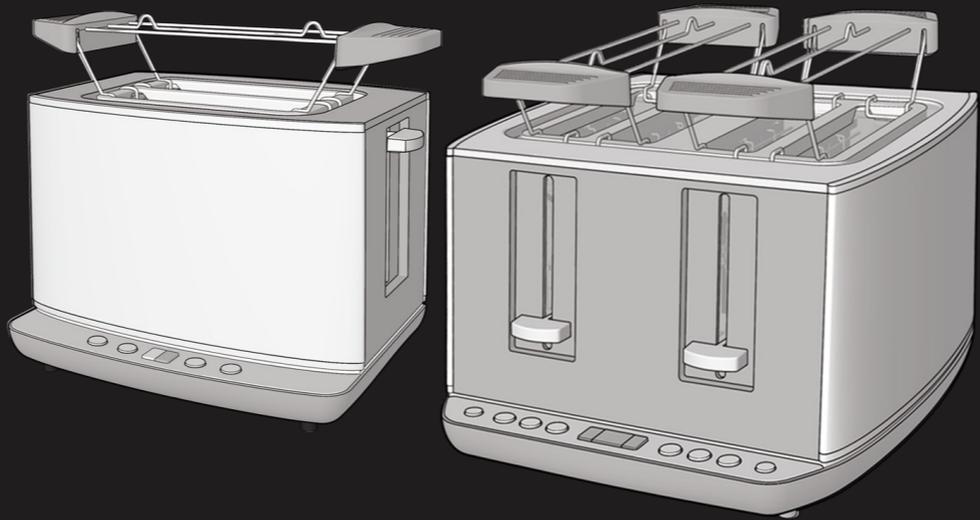


TT 22E UK - TT 44E UK  
02/2013 - ver.1.1

Indesit Company UK Ltd  
Morley Way,  
Peterborough PE2 9JB





www.indesitcompany.com

EN Operating Instructions

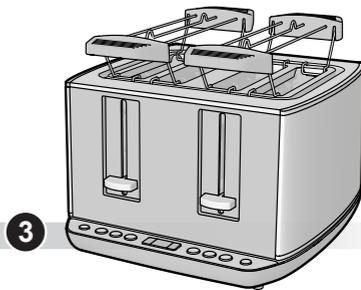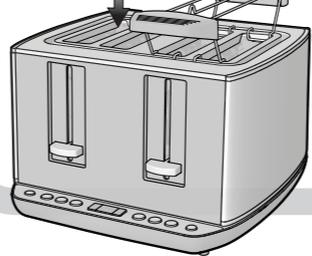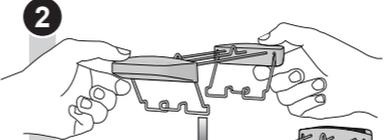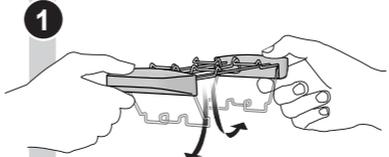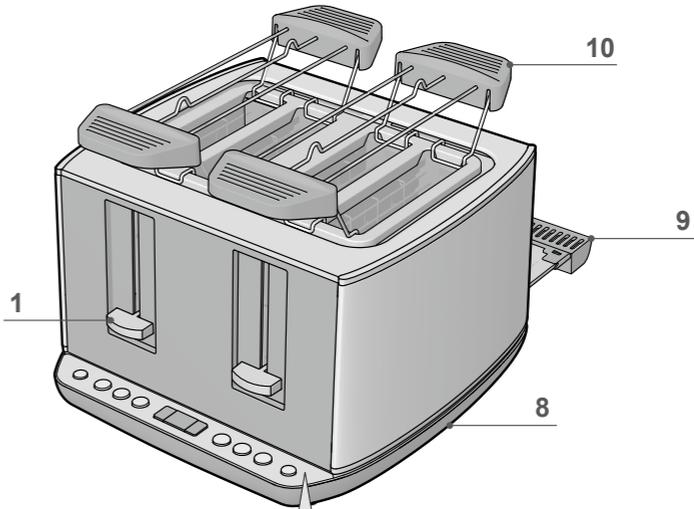

220-240V  
1800W

TT 44E AX0 UK

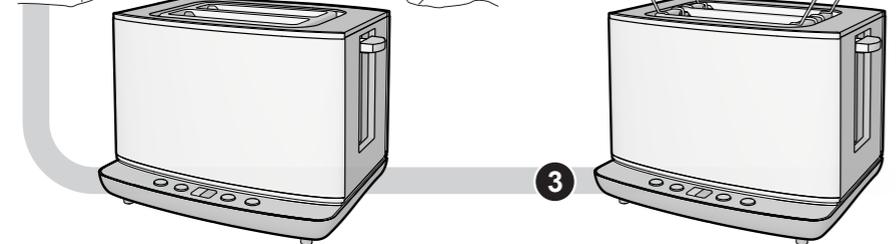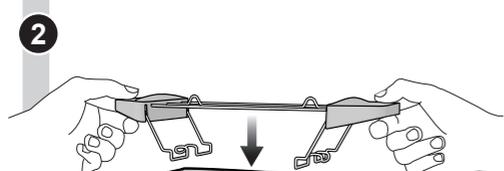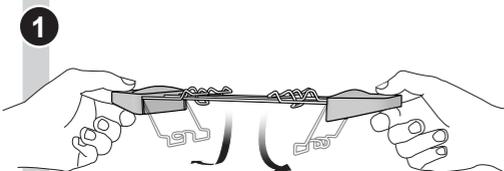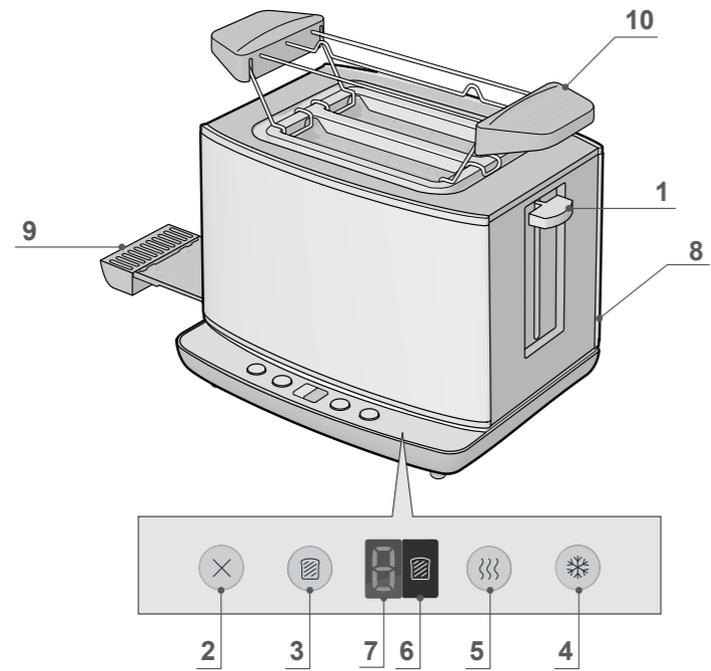

TT 22E AX0 UK

## PARTS AND FEATURES

1. Operating lever
2. Cancel button
3. Bagel button
4. Defrost button
5. Reheat button
6. Toasting level button
7. Display
8. Cord wrap
9. Removable crumb tray
10. Warming rack (only on some models)
11. Pliers (only on some models)

## INTRODUCTION

Thank you for purchasing our product.

In doing so, you have opted for an effective high-performance appliance.

If the instructions on the correct use of this appliance are not observed, the manufacturer shall assume no responsibility for any resulting damage.

The operating instructions may refer to different models: any difference is clearly identified.

## IMPORTANT INFORMATION ON SAFETY

When using any electrical appliance, always follow basic safety precautions, including the following:

1. Read all the instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch parts other than the operating controls, as the toaster can become hot during toasting.
4. As a protection against electrical shocks, do not immerse the cord, plug or any electrical part of the toaster in water or other liquids.
5. Unplug the unit from the outlet when it is not in use, before cleaning it or if it is defective. Let it cool down before installing or removing any parts.
6. Allow the unit to cool down completely before cleaning or storing it.
7. Do not operate any appliance with a damaged cord/plug or in abnormal state. If the mains cord is damaged, have it replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over the edge of a table / counter top or touch a hot surface. Do not use it as a carrying handle.
9. Do not place the appliance on or near a hot gas / electric burner or in a heated oven.
10. Do not use the appliance for any use other than its intended use.
11. Do not introduce any objects inside the toaster, as this may cause damage or risks.
12. As bread may burn, do not use the toaster near or below curtains and other flammable materials.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries or damage.
14. Use the appliance on a level stable work surface. Only operate the toaster when it is upright.
15. Do not attempt to remove the food when the toaster is in operation.
16. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
17. Remove the bread carefully after toasting to avoid any injuries.
18. This appliance has a built-in grounded plug. Make sure the wall outlet in your house is properly earthed.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. Keep the appliance and its cord out of the reach of children less than 8 years of age.
22. Warning: When toasting small bread slices less than 85mm long, be careful of the potential risk of burning when taking out the slices.
23. Do not use the appliance outdoors.
24. This appliance is intended to be used for household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential-type environments;
  - bed&breakfast-type environments.
25. Save these instructions.
26. Never cover the toaster slot.
27. Pull down the operating lever only for toasting: never block it.
28. Never leave the toaster unattended while it is in use.
29. Do not use it near the water in bathtubs, sinks or other containers.

## BEFORE FIRST USE

Carefully wipe the outside of the appliance to remove any dust that may have accumulated. Dry with a dry cloth. Remove any labels or stickers. Do not immerse the supply cord in water or other liquids. With the window open, operate the toaster without any bread inside at least three times at the highest toasting level setting. Then let it cool down.

## USING THE TOASTER

1. Put the food to be toasted into the bread slot. No more than two slices can be introduced every time.

 **Make sure the crumb tray is perfectly in place before using.**

2. Plug the power cord into the outlet.
3. Set the toasting level to the desired colour using the toasting level button. The lowest level is 1 and the highest level is 8. The default level is 4.

 **If you toast only one slice, set the toasting level lower than for two slices. If you toast the food continuously, the toasting colour of the different slices can be slightly different or darker, even if the same level is used.**

4. Pull down the operating lever until it engages: toasting will begin at once. Once the bread has been toasted to the preset level, the operating lever will automatically spring up.

 **The operating lever can rest on the bottom of the slot only if the plug was connected.**

5. During the toasting process, if the browning is satisfactory, press the CANCEL button to stop toasting.
6. If the bread was taken out of the FREEZER, set the toasting level according to your preference. Press the DEFROST button to toast it to your desired color, then pull down the operation lever until it is in place.
7. If you want to reheat any cold toasted bread, press the REHEAT button. Toasting time is fixed in this mode: when time is over the operating lever will automatically spring up and stop the reheating process.
8. The Bagel function makes it possible to toast bread, bagels, muffins etc on one side only (external side), while the other side (internal side) remains warm. Bagels and muffins should be sliced in half before toasting. Press the BAGEL button and then pull down the lever.

## USING THE WARMING RACK (only on some models) (A)

The food that cannot be placed inside the slots (e.g. rolls, baguettes, croissants) can be warmed on the warming rack

1. Place the support on the slot.
2. Use the button to set the desired toasting level.
3. Pull down the operating lever until it engages.

 **Never place aluminium foil on the warming rack. Never warm and toast at the same time!**

## USE OF ACCESSORIES PLIERS (only on some models)

Preparation of sandwiches or toasts.

The toaster is equipped with a burning cycle specific for the preparation of sandwiches or toasts:

1. Insert the sandwich into the rack.
2. Insert the rack into the slot.
3. Hold down the REHEAT button until you see the browning level number slowly flashing on the display.
4. Lower the operating lever.

With this feature, your sandwich will be well browned on the outside and cooked inside.

 **The function is not available on levels 1 and 2; in these cases, when the Reheat button is hold down, the display will quickly flash 3 times and Reheat function will be turned off.**

 **If the toaster starts to smoke, press the CANCEL button to stop toasting immediately.**

 **Remove any protective wrapping before positioning the toaster.**

 **Avoid toasting food with extremely runny ingredients such as butter.**

 **Be careful not to damage the internal mechanism or heating elements when**

removing the bread.

 **Toast any items only until they are golden brown and not brown or too dark.**

**Remove any burnt edges. Do not over-toast food containing starch - especially grain and potato products - to reduce the production of acryl amides.**

**If a slice gets stuck at the end of the toasting process, pull the power plug and carefully remove the bread after the toaster has cooled down.**

 **The use of browning levels from 4 to 6 is recommended for the preparation of sandwiches.**

 **Depending on the quantity or quality of stuffing, it can happen that the inside of the sandwich is not warm enough or completely melt: in case, please leave the sandwich into the slot for about one minute after ending the toasting.**

## CLEANING AND MAINTENANCE

1. Disconnect from the AC outlet before cleaning.
2. Wipe the outside with a soft dry cloth after the toaster has cooled down. Never use metal polish.
3. Pull out the crumb tray from the bottom of the toaster and empty it. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When the toaster is not used or is stored, the power cord may be wound under the bottom of the toaster.
5. Never use steam cleaners or pressure cleaners on the appliance.
6. If you use specific products for cleaning steel, be careful with the chrome parts. They could get stained .

## GUARANTEE

### 12 months Parts and Labour Guarantee

This certificate of guarantee represents the guarantee ("Guarantee" hereinafter) offered by Indesit Company UK Limited with registered office at Peterborough PE2 9JB in relation to products purchased in the United Kingdom and Indesit Ireland Limited with registered office in Dublin 9, Ireland for products purchased in the Republic of Ireland. This Guarantee does not affect your statutory rights.

Your product has the benefit of our manufacturer's Guarantee, which covers the product for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your product is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the product at no cost to you.

This Guarantee is subject to the following conditions:

- Documentary proof of original purchase date is provided.
- Cosmetic damage must be reported within 14 days from the date of purchase.
- The product has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The product is used only on the electricity supply printed on the rating plate.
- The product has been used for normal domestic purposes only.
- The product has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any product that is replaced become our property.
- The product is used in the United Kingdom or Republic of Ireland.

The Guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.

- Accidental damage, this includes but is not limited to, damage which occurs as a result of an external action.
- Replacement of any consumable item or accessory. These include but are not limited to: plugs, cables, light bulbs, hoses, brushes, covers and filters.
- Replacement of any removable parts made of glass or plastic.

## After Sales Service

No one is better placed to care for your Hotpoint product during the course of its working life than us – the manufacturer.

## Essential Contact Information Advice Line

We have a dedicated team who can provide free advice and assistance with your product if you experience any technical difficulties. Simply call our Hotpoint Service Hotline on 08448 240 055 (Republic of Ireland 0818 904 041) for telephone assistance.

**Please note:**

**Our advisors will require the following information:**

Model number:

Serial number:

## Consumables and Accessories

We supply a full range of consumables and accessories to keep your product functioning efficiently throughout its life.

**UK: 08448 225 225**

**Republic of Ireland: 0818 313 413**

**[www.hotpoint.co.uk](http://www.hotpoint.co.uk)**

## Recycling and Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality, recycled components to keep

down customer costs and minimise material waste.

Please dispose of packaging and old products carefully.

## Register your new product and get a second year FREE!

We want to give you additional benefits of ownership of your product and offer you an additional free 1 year guarantee when you register your product with Hotpoint within 28 days of purchase. If you do not register your product with Hotpoint within 28 days, your product is guaranteed for 1 year only.

To activate your 2 year guarantee register with us online at [www.hotpoint.co.uk](http://www.hotpoint.co.uk). Please note that the 2 year guarantee is only available in UK and Ireland and is subject to the same conditions as the 1 year Guarantee. Please refer to the certificate of guarantee for more information.

## DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.