





 **Hotpoint**

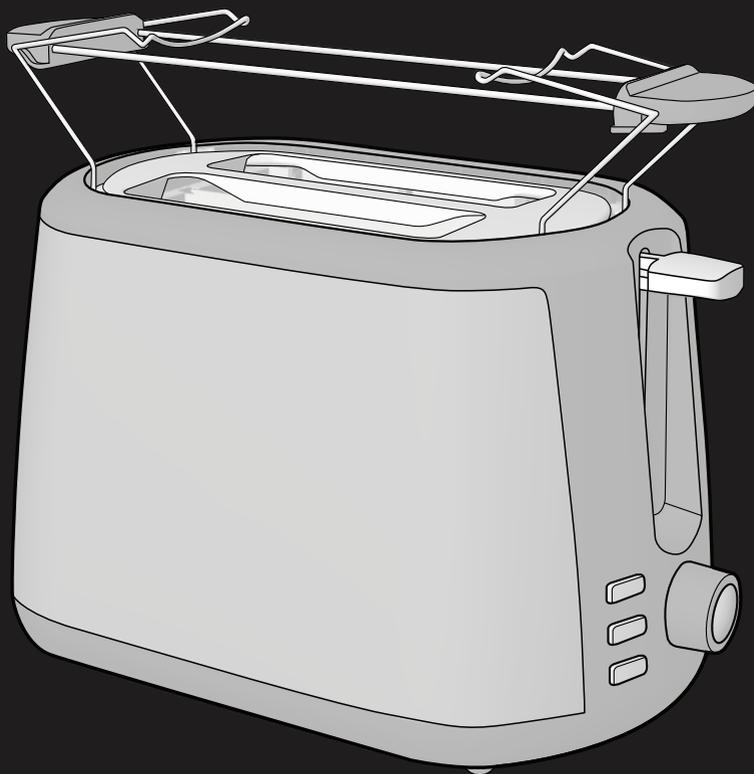

**EN    Operating Instructions**

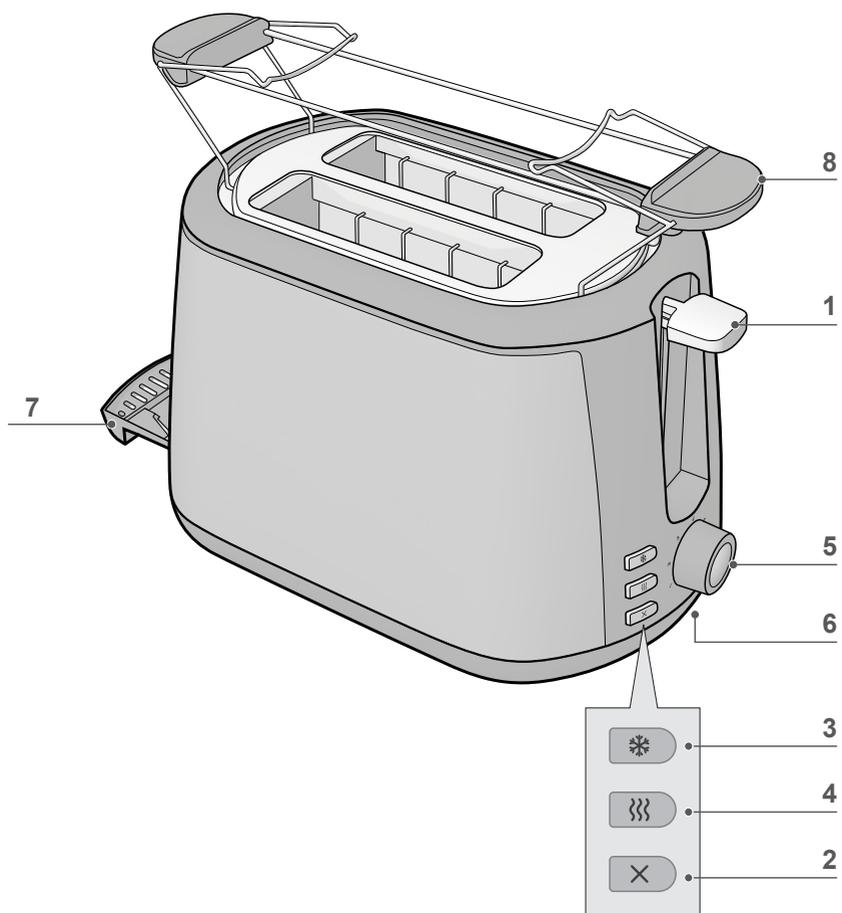

TT 22M UK

## PARTS AND FEATURES

1. Operating lever
2. Cancel button
3. Defrost button
4. Reheat button
5. Toasting level knob
6. Cord wrap
7. Removable crumb tray
8. Warming rack

## INTRODUCTION

Thank you for purchasing our product.

In doing so, you have opted for an effective high-performance appliance.

If the instructions on the correct use of this appliance are not observed, the manufacturer shall assume no responsibility for any resulting damage.

The operating instructions may refer to different models: any difference is clearly identified.

## IMPORTANT INFORMATION ON SAFETY

When using any electrical appliance, always follow basic safety precautions, including the following:

- This appliance shall not be used by children.
- Keep the appliance and its cord out of reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards

involved.

- The equipment was designed for household and similar uses such as in:
  - - staff kitchen areas in shops, offices and other work environments;
  - - farm houses;
  - - hotels, motels and other residential environments by the guests;
  - - bed&breakfast-type environments.
- Supervise children to prevent them from playing with the appliance.
- Turn unit off and unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn unit off, grasp plug, and pull out from wall outlet. Never yank on cord.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to an authorized service facility for examination, repair, or electrical or mechanical

adjustment.

## • Do not leave the appliance unattended while it is running.

- Read all the instructions.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
- Do not touch parts other than the operating controls, as the toaster can become hot during toasting.
- As a protection against electrical shocks, do not immerse the cord, plug or any electrical part of the toaster in water or other liquids.
- Allow the unit to cool down completely before cleaning or storing it.
- Do not let the cord hang over the edge of a table / counter top or touch a hot surface. Do not use it as a carrying handle.
- Do not place the appliance on or near a hot gas / electric burner or in a heated oven.
- Do not use the appliance for any use other than its intended use.
- Do not introduce any objects inside the toaster, as this may cause damage or risks.
- As bread may burn, do not use the toaster near or below curtains and other flammable materials.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries or damage.
- Use the appliance on a level stable work surface. Only operate the toaster when it is upright.
- Do not attempt to remove the food when the toaster is in operation.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Remove the bread carefully after toasting to avoid any injuries.
- This appliance has a built-in grounded plug. Make sure the wall outlet in your house is properly earthed.
- Warning: When toasting small bread slices less than 8,5mm high, be careful of the potential risk of burning when taking out the slices.
- Do not use the appliance outdoors.
- Save these instructions.
- Never cover the toaster slot.
- Pull down the operating lever only for toasting: never block it.
- Do not use it near the water in bathtubs, sinks or

other containers.

## BEFORE FIRST USE

Carefully wipe the outside of the appliance to remove any dust that may have accumulated. Dry with a dry cloth. Remove any stickers. Do not immerse the supply cord in water or other liquids. With the window open, operate the toaster without any bread inside at least three times at the highest toasting level setting. Then let it cool down.

 **Remove any protective wrapping before positioning the toaster.**

## USING THE TOASTER

1. Put the bread to be toasted into the bread slot. No more than two slices can be introduced every time.

 **Make sure the crumb tray is perfectly in place before using.**

2. Plug the power cord into the outlet.
3. Set the toasting level to the desired colour using the toasting level knob. The lowest level is 1 and the highest level is 7.

 **If you toast only one slice, set the toasting level lower than for two slices. If you toast the food continuously, the toasting colour of the different slices can be slightly different or darker, even if the same level is used.**

4. Pull down the operating lever until it engages: toasting will begin at once. Once the bread has been toasted to the preset level, the operating lever will automatically spring up.

 **The operating lever can rest on the bottom of the slot only if the plug was connected.**

5. During the toasting process, if the browning is satisfactory, press the CANCEL button to stop toasting.
6. If the bread was taken out of the FREEZER, set the toasting level according to your preference. Press the DEFROST button to toast it to your desired color, then pull down the operation lever until it is in place.
7. If you want to reheat any cold toasted bread, press the REHEAT button. Toasting time is fixed in this mode: when time is over the operating lever will automatically spring up and stop the reheating process.

## USING THE WARMING RACK (only on some models) (A)

The food that cannot be placed inside the slots (e.g. rolls, baguettes, croissants) can be warmed on the warming rack

1. Place the support on the slot.
2. Use the button to set the desired toasting level.
3. Pull down the operating lever until it engages.

 **Never place aluminium foil on the warming rack. Never warm and toast at the same time!**

## USE OF ACCESSORIES PLIERS (only on some models)

### Preparation of sandwiches or toasts

The toaster is equipped with a cooking cycle specific for the preparation of sandwiches or toasts:

1. Insert the sandwich into the rack.
2. Insert the rack into the slot.
3. Lower the operating lever.

 **If the toaster starts to smoke, press the CANCEL button to stop toasting immediately.**

 **Avoid toasting food with extremely runny ingredients such as butter.**

 **Be careful not to damage the internal mechanism or heating elements when removing the bread.**

 **Toast any items only until they are golden brown and not brown or too dark.**

**Remove any burnt edges. Do not over-toast food containing starch - especially grain and potato products - to reduce the production of acryl amides. If a slice gets stuck at the end of the toasting process, pull the power plug and carefully remove the bread after the toaster has cooled down.**

 **Depending on the quantity or quality of stuffing, it can happen that the inside of the sandwich is not warm enough or completely melt: in case, please leave the sandwich into the slot for about one minute after ending the toasting.**

## CLEANING AND MAINTENANCE

1. Disconnect from the AC outlet before cleaning.
2. Wipe the outside with a soft dry cloth after the toaster has cooled down. Never use metal polish.
3. Pull out the crumb tray from the bottom of the toaster and empty it. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When the toaster is not used or is stored, the power cord may be wound under the bottom of the toaster.
5. Never use steam cleaners or pressure cleaners on the appliance.
6. If you use specific products for cleaning steel, be careful with the chrome parts. They could get stained.

## DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Indesit Company SpA  
Viale Aristide Merloni, 47  
60044 Fabriano (AN), Italy

[www.indesitcompany.com](http://www.indesitcompany.com)

ÜLKEYE ÖZGÜ BİLGİLER KİTAPÇIĞIN SON SAYFASINDA BULABİLİRSİNİZ

TT 22M UK  
07/2014 - ver.1.0