



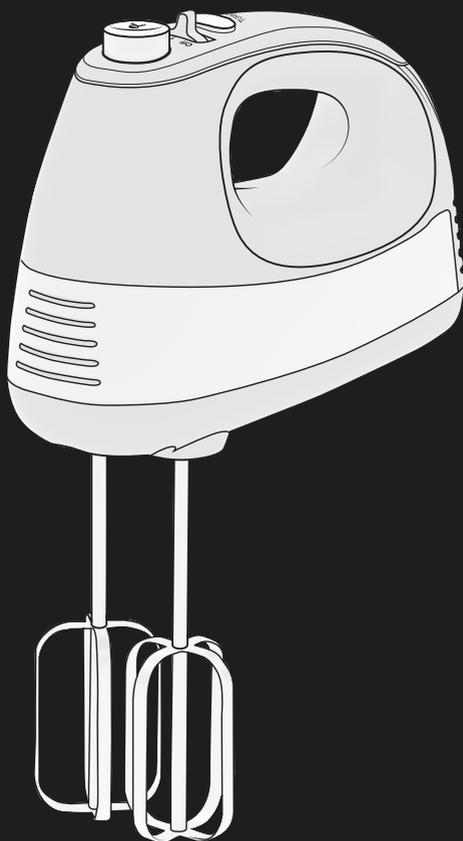


 **Hotpoint**



EN Operating Instructions

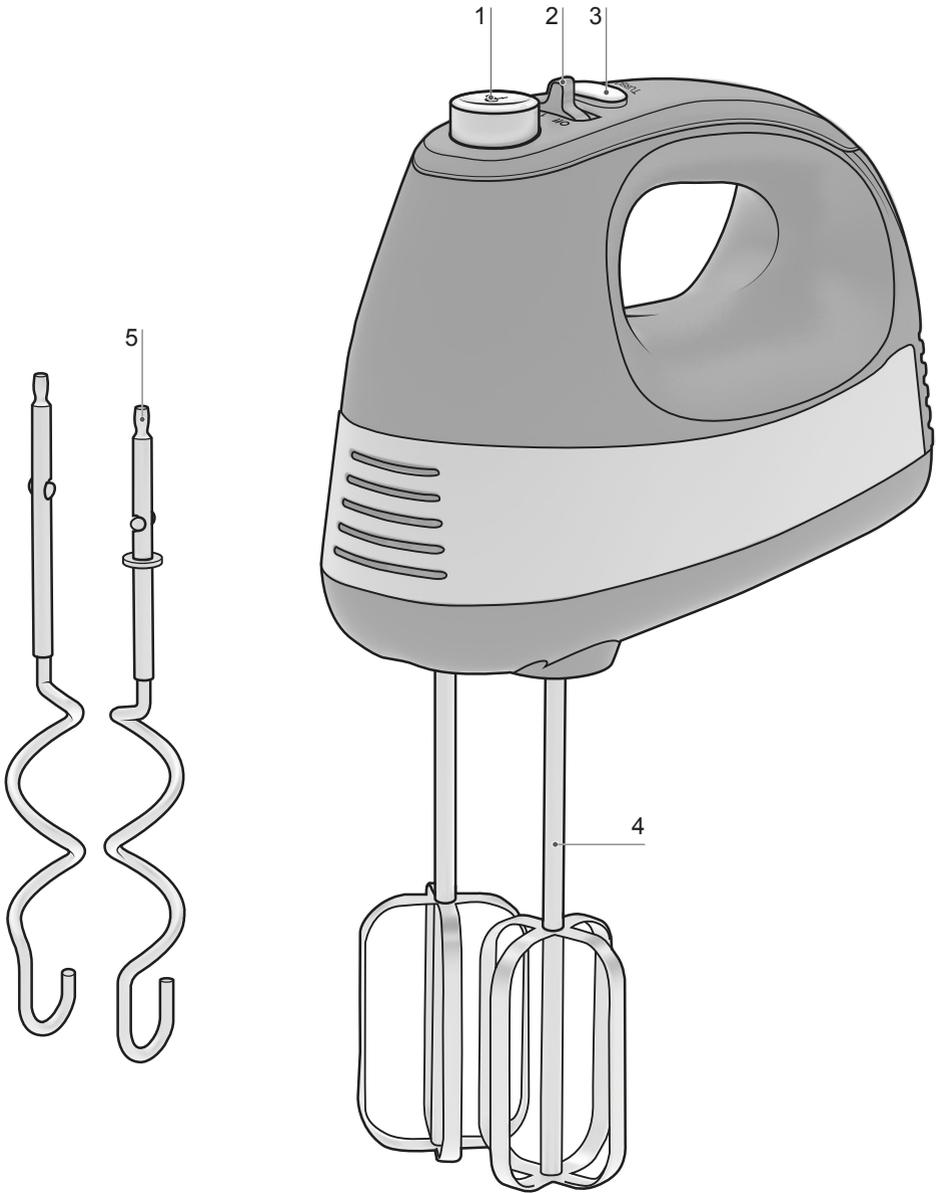

HM 03 UK

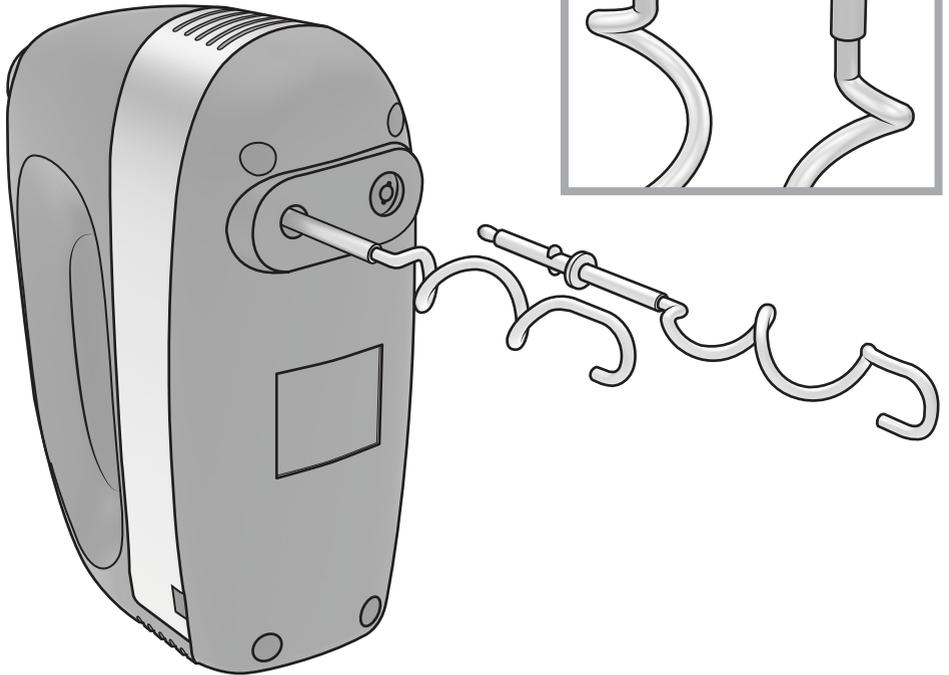

Read this manual thoroughly before using and save it for future reference

PARTS AND FEATURES

1. Eject button
2. Speed button
3. Turbo button
4. Beaters
5. Dough hooks

IMPORTANT INFORMATION ON SAFETY

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before use, check that the voltage of your wall outlet corresponds to the one on the rating plate which is on the bottom of the appliance.
3. Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.
4. Do not let cord hang over edge of table or counter or hot surface.
5. Do not immerse cord or the body of mixer into water as this would give rise to electric shock.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Close supervision is necessary when your appliance is being used near children or infirm persons.
8. Do not place an appliance on or near a hot gas or on a heated oven.
9. Never eject beaters or dough hooks when the appliance is in operation.
10. Do not leave mixer unattended while it is operating.
11. Unplug from outlet while not in use, before putting on or taking off parts, and before

cleaning.

12. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury
13. Remove beaters from mixer before washing.
14. Always check that the control is OFF before plugging cord into wall outlet. To disconnect, turn the control to OFF, then remove plug from wall outlet.
15. Avoid contacting with moving parts.
16. Keep hands, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, and/or damage to the mixer.
17. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental

capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

18. Keep the appliance and its cord out of reach of children less than 8 years.
19. Switch off the appliance before changing accessories or approaching parts which move in use.
20. Do not use outdoors.
21. Save these instructions.

OPERATING INSTRUCTIONS BEFORE USING MIXER

Remove any packages, disassemble any detachable parts. Clean the dough hooks and beaters. Before assembling the mixer, make sure the power cord

is unplugged from the power outlet and the speed selector is on "Off" position.

USING YOUR MIXER

1. Assemble proper beaters or dough hooks.

 **Note:** Beaters can be inserted in either socket, as the beaters are identical. For dough hooks, the one with washer can only be inserted into the bigger socket and the other one can only be inserted into the smaller one. The two dough hooks cannot be inserted reversely (fig. 1).

2. Ensure that the unit is on "Off" position, then plug in the power source.

3. Set the speed selector to your desired speed. There are 5 speed settings to be selected. Note When kneading yeast dough, we suggest to set the speed selector on the lower speed and then on the higher speed to achieve the best results.

 **Note:** The mixer will run at the highest speed when pressing turbo button.

 **Warning:** Do not put knife, metal spoons, fork and so on into bowl while operating.

4. The max operation time shall not exceed 10 minutes, then have a rest for a proper time until your hand mixer has cooled down between two consecutive cycles.

 **Note:** During operation you may rotate the bowl by hand to achieve the best results.

5. When mixing is complete, turn the speed selector to "Off" setting, and unplug the cord from the power outlet.

 **Note:** If necessary, scrape the food particles in excess from the beaters or dough hooks a rubber or wooden spatula.

6. Hold the beaters or dough hooks with one hand and press the Ejector button down firmly with the other hand to remove the beaters or the dough hooks.

 **Note:** Remove the beaters or dough hooks only with the speed selector on Off position.

 **Note:** During operation, you can move the mixer to upright position occasionally, but make sure the speed selector is on Off position.

CLEANING AND MAINTENANCE

1. Unplug the appliance and wait for it to be completely cooled down before cleaning

2. Wipe over the outside surface of the head with a damp cloth and mop with a soft dry cloth.

3. Wipe any food particles in excess out of the power cord.

4. Wash beaters and dough hooks in warm soapy water and dry them with a soft cloth.

 **Note:** Beaters and dough hooks can be washed in the dishwasher.

 **Caution:** The mixer can not be immersed into water or other liquid.

Warning: Any other maintenance operation shall be performed by an authorized service personnel.

COOKERY TIPS

 **Note:** Refrigerated ingredients, i.e., butter and eggs should be at room temperature before mixing.

 **Note:** To eliminate the possibility of shells into your recipe, break eggs into separate container first, then adding to the mixture.

 **Note:** Do not over-beat. Be careful that you only mix/blend mixtures until recommended in your recipe.

 **Note:** Always use the low speed when folding dry ingredients.

 **Note:** Seasonal temperature changes, temperature of ingredients and their texture variation from area to area all play a part in the required mixing time and in the final result.

 **Note:** Always start mixing at slow speed. Gradually increase to the recommended speed as stated in the recipe.

GUARANTEE

**12 months Standard Guarantee
Enhanced to 3 years upon product registration**

This certificate of guarantee represents the guarantee ("Guarantee" hereinafter) offered by Indesit Company UK Limited with registered office at Peterborough PE2 9JB in relation to products purchased in the United Kingdom and Indesit Ireland Limited with registered office in Dublin 9, Ireland for products purchased in the Republic of Ireland. This Guarantee does not affect your statutory rights.

Your product has the benefit of our manufacturer's Guarantee, which covers the product for twelve months from the date of purchase.

This gives you the reassurance that if, within that time, your product is proven to be defective because of either workmanship or materials, we will, at our discretion, either repair or replace the product at no cost to you.

This Guarantee is subject to the following conditions:

- Documentary proof of original purchase date is provided.
- Cosmetic damage must be reported within 14 days from the date of purchase.
- The product has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The product is used only on the electricity supply printed on the rating plate.
- The product has been used for normal domestic purposes only.
- The product has not been altered, serviced, maintained, dismantled, or otherwise interfered with by any person not authorised by us.
- Any repair work must be undertaken by us or our appointed agent.
- Any parts removed during repair work or any product that is replaced become our property.

- The product is used in the United Kingdom or Republic of Ireland.

The Guarantee does not cover:

- Damage resulting from transportation, improper use, neglect or interference or as a result of improper installation.
- Accidental damage, this includes but is not limited to, damage which occurs as a result of an external action.
- Replacement of any consumable item or accessory. These include but are not limited to:
- plugs, cables, light bulbs, hoses, brushes, covers and filters.
- Replacement of any removable parts made of glass or plastic.

After Sales Service

No one is better placed to care for your Hotpoint product during the course of its working life than us – the manufacturer.

Essential Contact Information Advice Line

We have a dedicated team who can provide free advice and assistance with your product if you experience any technical difficulties. Simply call our Hotpoint Service Hotline for telephone assistance.

UK: 03448 240 055

Republic of Ireland 0818 904 041

www.hotpointservice.co.uk

Please note:

Our advisors will require the following information:

Model number:

Serial number:

Consumables and Accessories

We supply a full range of consumables and accessories to keep your product functioning efficiently throughout its life.

UK: 03448 225 225

Republic of Ireland: 0818 313 413

parts.hotpoint.co.uk/shop

Recycling and Disposal Information

As part of Hotpoint's continued commitment to helping the environment, Hotpoint reserves the right to use quality, recycled components to keep down customer costs and minimise material wastage.

Please dispose of packaging and old products carefully.

Register your new product and receive 2 additional year FREE!

As an additional benefit of owning your Hotpoint product, we are offering 2 years additional free guarantee. To be eligible for this you will need to contact us to register your product within 28 days of purchase. If you do not register your appliance within the 28 days you will still be entitled to 1 years manufacturer's guarantee. To activate your 3 year guarantee register online at www.hotpoint.co.uk. Please note that the extended guarantee is only available in the UK and Ireland and is subject to the same terms and conditions as the 1 year guarantee. Please refer to the certificate of guarantee for more information.

DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream.



Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.



The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.



Indesit Company UK Ltd
Morley Way,
Peterborough PE2 9JB

www.indesitcompany.com

HIM 03 UK
03/2015 - ver.3.1